

# BTM-KNX

## BUS PORT FOR KNX SYSTEM

Bus port for KNX system required for connecting a **INT-KNX** module to KNX bus.

